



Construction Type Table for Needed Fire Flow

The Construction Type Table in Admin > Field Management > Construction Types must be in one of these formats to use the Needed Fire Flow Feature. You may need to edit your table to match the black text below and the red text is optional. Note the hyphen, which must be in place in the Construction Type for the system to calculate the Needed Fire Flow. Any text you need for a descriptor can be added to the right of the hyphen (**red text**).

Type I (443) - **descriptor**

Type V (111) - **descriptor**

Type I (332) - **descriptor**

Type IV - **descriptor**

Type I (222) - **descriptor**

Type VA - **descriptor**

Type IA - **descriptor**

Type II (000) - **descriptor**

Type IB - **descriptor**

Type III (200) - **descriptor**

Type I - **descriptor**

Type IIB - **descriptor**

Type II (111) - **descriptor**

Type IIIB - **descriptor**

Type III (211) - **descriptor**

Type II - **descriptor**

Type IIA - **descriptor**

Type V (000) - **descriptor**

Type IIIA - **descriptor**

Type VB - **descriptor**

Type III - **descriptor**

Type V - **descriptor**

Type IV (2HH) - **descriptor**